

PREP

GETTING STARTED

Get started by laying out all the shutters and matching them with the corresponding windows. This process is used to familiarize yourself with the shutters and reduce any confusion before installation.

CHOOSING THE PROPER FINISH

Paints can generally be applied with an air brush, paint brush or other applicators. Stains can generally be applied with clean rags, cheese cloths, brushes, and other applicators. Different results can be achieved with different applicators so be sure to read the label of your specific product for the best applicator to use. Also there are different paints and stains for outdoor and indoor use. Be sure to use the right product for your project.

PAINTING/STAINING

Before painting/staining your project first prep the area by using a vacuum, cloth, or brush to remove all dust and other debris from the product. Some paints/stains may take multiple steps and its own specific directions to achieve the right look and color so make sure to test the product first. Be sure to read the product label for directions on applying to our Euro-Lite HDF products. Once you have achieved the right color apply a protective clear finish, if desired. Remember to choose the right finish for your project and to follow the label directions for the best results.

CUTTING AND MILLING

Our Euro-Lite HDF products are adjustable and can be adjusted with carpentry tools such as a table saw, circular saw, hand saw, or any other like tool. **As a safety measure, be sure to always wear the right protective gear while cutting or trimming our products such as safety glasses and dust masks.** You can also visit www.realmofdesign.com for the Material Safety Data Sheet (MSDS) on these products.



Any of the products above will be suitable for your project.

INSTALLATION

MATERIALS

You will need screws or nails, drywall anchors, an adhesive (PL Premium), and a filler (Dap® DryDex® Spackling).

SHUTTERS

Begin by holding the shutter next to the window and trace an outline of the shutter on the wall (Figure A). Apply an adhesive to the back of the shutter and adhere the shutter to the wall making sure to line up the edges with the outline. Fasten the shutter to the wall or framing with screws or nails (Figure B).

If installing a Euro-Lite HDF Plank Shutter with batten board and additional step is required. Place the batten board, bottom side up, at the angle needed to be installed on the shutter and mark the area to be trimmed. Trim the board and apply an adhesive to the back and adhere to the shutter. Proceed to install as described above.

FINISHING

Once the shutter has been installed on the wall fill all holes with a filler such as Dap® DryDex® Spackling. Your shutters can now be painted with a high quality exterior paint.

REMINDER

All of our Euro-Lite HDF products are purely decorative and non-structural. Follow all manufactures directions of the products being used such as the suggested PL Premium adhesive, and follow all building codes. For any question you may have regarding these instructions, call 1.702.566.1188 or visit www.realmofdesign.com.

Figure A

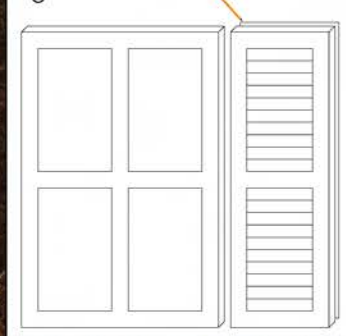


Figure B

