FINISHING

GETTING STARTED

Cet started by laying out all your Aged Stone products. This process is used to familiarize yourself with the product and to see the necessary adjustments that need to be made for installation.

CUTTING AND MILLING

Our Aged Stone products can be easily adjusted using a grinder with a diamond blade. Be sure to always wear the necessary safety gear such as safety glasses and dust masks while cutting or trimming our Aged Stone products. You can also visit www.realmoddesign.com for the Material Safety Data Sheet (MSDS) and for any other guestion you many have on this type of product.



INSTALLATION

MATERIALS

You will need some 2x4's, screws or nails, an adhesive (PL Premium), and wooden shims. You will also need color matched grout for textured products or a filler (Dap® DryDex® Spackling) for smooth products.

INSTALLING PRODUCTS

For products with hallow backs, get started by installing wood blocking with screws or nails to the appropriate surface every 24" to 36" running the full length of the product (Figure A). The product can now be installed. Apply an adhesive to the top edge and secure to both sides of the wood blocking with the appropriate screws or nails (Figure B). Use wood shims to keep products even and level. Upon completion blend seams, joints, and screw/nail holes with color matched grout for textured products and a filler for smooth products.


Products with a solid backing should be installed on a solid wall/backing or studs. Start by marking the outside area of the product being installed. Apply an adhesive along the back. Keep product under tension by holding into place and fastening with the appropriate screws or nails. Use wood shims to keep products even and level. Upon completion blend joints and screw/nail holes with color matched grout for textured products and a filler for smooth products.

REMINDER

Allof our Euro-Lite HDF products such as our faux wood beams are purely decorative and non-structural. For any questions you may have regarding these instructions, call 1.702.566.1188 or visit www.realmoidesign.com.



PL® Premium adhesive Dato® DryDex® spackling, screws, 2x4s, and wood shims (shown above) are a few materials needed for installation of our Aged Stone products.

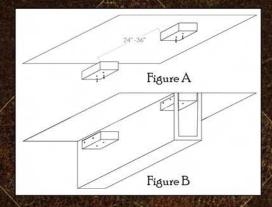

Dap® DryDex® and PL® Premium Polyurethane Construction Adhesive are products of their respective companies and are in no way affiliated with Realm of Design in any way. The said products are shown as suggestions only. Realm of Design assumes no liability for any damages, including but not limited to personal, property, incidental, or consequential damages, resulting from the installation of its products.